

# THE PLATINUM PACKAGING GROUP

## PLAT*Machinery* Table Top Tray Sealers

### HSTT Precision Tool

#### 1. Mold Removal and Replacement

##### **ELECTRICAL HAZARD**

Always REMOVE the machine from the power outlet before performing any maintenance or cleaning works.

##### **BURN HAZARD**

- Cleaning and maintenance should be performed by your trained personnel only.
- Allow unit to cool down before normal cleaning.
- Always wear hot pad gloves when performing machine cleaning.

#### 2. Upper Mold

##### **Sealing and Cutting Function**

Standard Upper mold (i.e. without the gas flushing option) performs the sealing and the cutting function at the same time.

##### **Removing and Exchanging**

mold can be removed for cleaning or exchange by (see images before):

- Removing the gas flush tube
- Removing the thermocouple and wiring connection
- Removing the black screw



#### THE PLATINUM PACKAGING GROUP

tel: (562) 630-6700

7627 Somerset Blvd., Paramount, CA 90723

**TO PLACE ORDERS:**  
sales@platinumpkggroup.com

**FOR MORE INFORMATION:**  
www.platinumpkggroup.com

**QUESTIONS:**  
information@platinumpkggroup.com